



## Hilti adaptive torque - How to find the right bolt setting

### 1. General:

The Hilti AT system (cordless impact wrench SIW 6AT-A22 + adaptive torque module SI-AT-A22) can be used for pre-tightening standard bolts to a repeatable pretension/torque level. This helps to protect the bolts from being over-torqued. A final check with a calibrated torque wrench may still be needed.

Hilti's Si-AT-A22 adaptive torque module contains the operation mode "Tightening". In this operation mode a total of 30 settings are available. The setting to be selected for a particular application depends on the diameter of the threaded fastener, the parts to be fixed and the specific torque. The setting has to be determined step by step on the basis of this data.

For the "Tightening" operation mode, the display shows the following:



The number on the right of the bolt shows the selected setting.

### 2. Starting to select the right bolting setting:

As a starting point for the iterative method for selecting the right setting, the following two charts provide a first indication what torque each setting of the Hilti AT system could generate in an application. Chart 1 shows possible generated torque values for metric bolts (M8 – M16), Chart 2 shows possible generated torque values for fractional bolts (3/8" – 5/8").

#### Note:

The values illustrated on this chart are provided for reference purposes. The actual tightening torque varies with ambient conditions (the bolt being tightened, hardware being used, method of holding the bolt in place, etc.). The following chart provides only a rough estimation and does not substitute the step by step selection of the right setting.

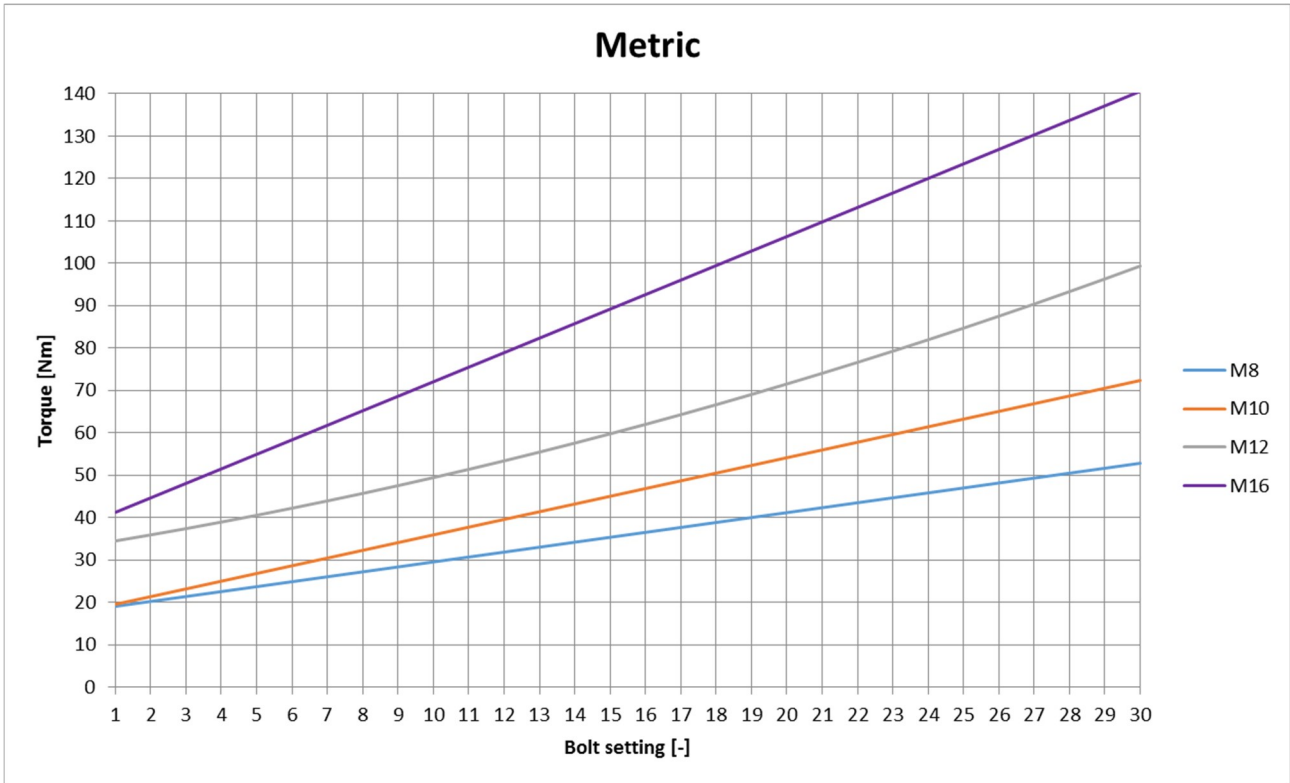


Chart 1: Possible torque values for metric bolts

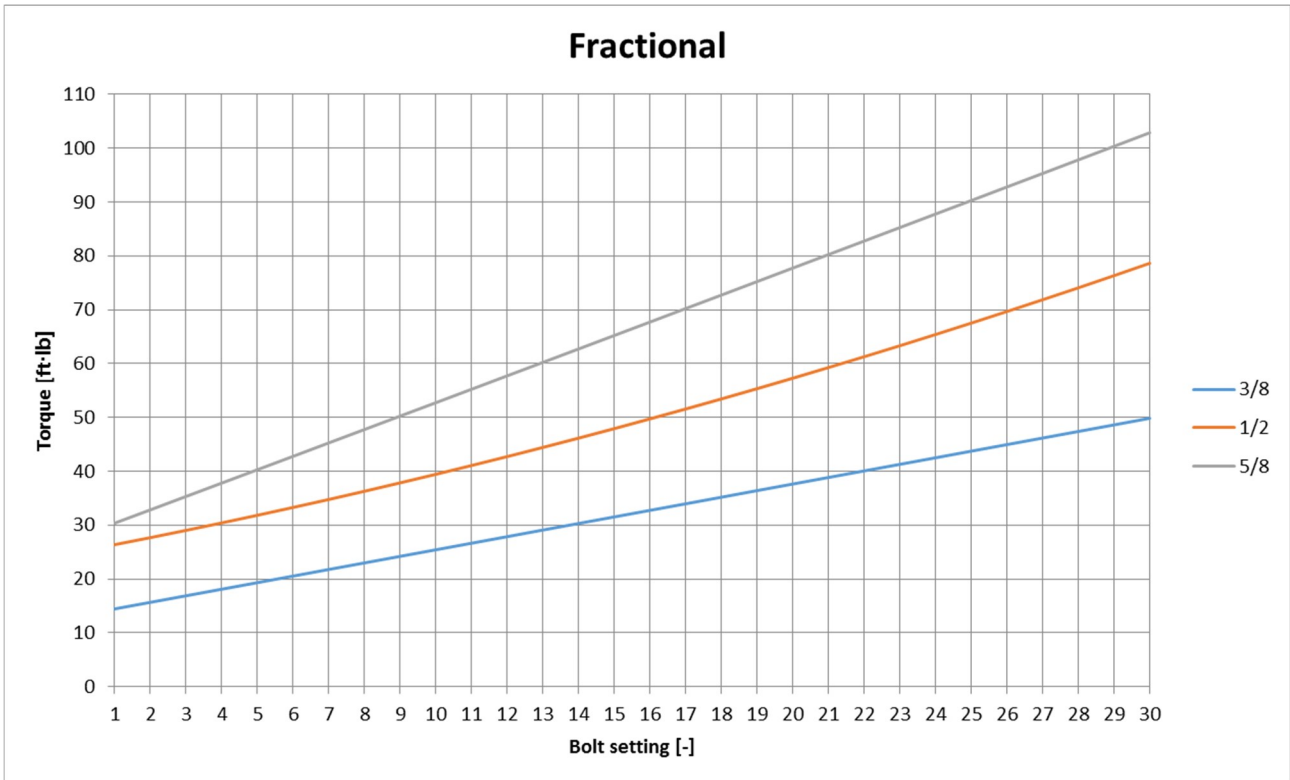


Chart 2: Possible torque values for fractional bolts.



### 3. Step by step selection of the right bolting setting:

**Note:** Steel plates must be in contact and nut must be screwed down to baseplate before torquing!  
For a repeatable torquing of two or more bolts, make sure that all torquing conditions remain unchanged.  
A change in torquing conditions can necessitate a change to a different setting.

	Iterative method
1. Step	Check that the mating faces of the components to be joined are seated flat against each other and that the nut has been screwed down until it is seated against the component.
2. Step	Use a low setting for the initial tightening of the nut of your threaded fastener you are going to tighten.
3. Step	Use a calibrated torque wrench to check the torque applied to the bolt to be fastened.
4. Step	Depending on the result, adjust setting to a higher or lower setting, loosen the bolt and repeat step 2.
5. Step	After the right setting is found, you can use the Hilti bolting QR codes displayed in this document for quick and easy selection.

### 4. Hilti QR-codes

The following displayed Hilti bolting QR codes can be used for quick and easy selection of the right bolt setting on the Hilti SI-AT-A22 adaptive torque module.

#### Warning:

QR- Codes contained in this document are provided by Hilti only as blank icons and solely being compatible with SI-AT-A22 Hilti Adaptive Torque Module. The configurations being made to each QR Code are solely your responsibility and are essentially based on the data you put in. You bear the sole responsibility for the absence of errors, the completeness and the relevance of the data and the sole responsibility for having the configurations checked and cleared by an expert against local valid standards, approvals and plausibility.

Hilti's Terms and Conditions of Sale, available at [www.hilti.com](http://www.hilti.com) apply.



**Bolting chart**












Customer name: \_\_\_\_\_

Project details:










T: \_\_\_\_\_  
E: \_\_\_\_\_

ID	Name	Ft-lb / Nm	Comments	QR-Code
1				
2				
3				
4				
5				
6				
7				
8				
9				



ID	Name	Ft·lb / Nm	Comments	QR-Code
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				



ID	Name	Ft-lb / Nm	Comments	QR-Code
21				
22				
23				
24				
25				
26				
27				
28				
29				
30				